

[Aspire :: OSGi Bundles :: ACR122u Reader](#)

Aspire :: OSGi Bundles :: ACR122u Reader

- [1 Context](#)
 - [2 Building process](#)
 - [3 Deployment](#)
 - [4 LRSpec](#)
 - [4.1 Configurable properties](#)
 - [5 Link](#)
-

This section describes the bundle for [ACR122u reader](#) (ie HALAdaptor)

Context

The [ACR122u reader](#) is an ISO 14443 RFID reader. This reader deals also with Mifare, Innovision, ... tags. The ACR122u reader is sold as OEM by [Touchatag](#) and others.

The ACR122u Reader bundle packages a HALAdaptor for Tagsys Medio L100 & L200 reader attached to the host (RS232).

Building process

1. You must firstly build the tikitag clien project. This project is a open source Java library to access the acr122u reader.

The sources of this project are in *trunk/bundles/readers/tikitag-client*. Use maven to build this project, the instruction is mvn clean install

1. You must also build the abstract-reader project. This project contains base classes used by all HAL adaptors.

The sources of this project are in *trunk/bundles/readers/abstract-reader*. Use maven to build this project, the instruction is mvn clean install

1. Finally you must build the acr122u reader project. The sources are in *trunk/bundles/readers/acr122u-reader*

Use maven to build this project, the instruction is mvn clean install

Deployment

The artifacts to deploy are

- org.ow2.aspirerfid:abstract-reader (Artifact that has the base reader classes)
- com.tikitag:com.tikitag.client-bundle (The open source java library)
- org.ow2.aspirerfid:tagsys-reader (The acr122u reader driver)

LRSpec

Configurable properties

```
<?xml version="1.0" encoding="UTF-8" standalone="yes"?> <ns3:LRSpec
xmlns:ns2="urn:epcglobal:ale:wsl:1" xmlns:ns3="urn:epcglobal:ale:xsd:1">
```

Aspire Wiki - ObjectWeb - ACR122Reader

```
</isComposite> <readers /> <properties> <property> <name>ReaderType</name>
<value>org.ow2.aspirerfid.ale.server.readers.rp.acr122u.ACR122UAdaptor</value> </property>
<property> <name>Description</name> <value>This ACR122u Logical Reader </value> </property>
<property> <name>PhysicalReaderName</name> <value>ACR122u</value> </property> <property>
<name>ReadTimeInterval</name> <value>1500</value> </property> </properties> </ns3:LRSpec>
```

Link

- [ACR122u reader](#)

[Aspire :: OSGi Bundles :: ACR122u Reader](#) (en)

Creator: xwiki:XWiki.donsez Date: 2010/06/21 06:49

Last Author: xwiki:XWiki.gabo_pedraza Date: 2010/06/25 12:42

Copyright (c) 2008-2010, [Aspire](#)